



HOW TO SETUP AND BEGIN USING A DAS/HILLS ALARM SYSTEM WITH VOICE NAV KEYPAD

*To begin, firstly make sure the battery has been connected inside the main control unit which is usually located in a linen cupboard or walk in robe, the battery should be connected red lead to red terminal and black lead to black terminal once you have checked this close the panel lid and check the 'plug pack' or transformer has been inserted into the power point and switched on.

The first thing which needs to be done is the setting of the time and date this is done at the keypad by entering the following:

PRESS MENU THEN 9 FOLLOWED BY 1

NOW THE CODE 1234

PRESS 1 TO CONFIGURE THE TIME

ENTER THE CURRENT HOUR VALUE FROM <u>1</u> TO <u>12</u> FOLLOWED BY <u>ENTER</u> NOW ENTER THE CURRENT MINUTES VALUE FROM 00 TO 59 FOLLWED BY

ENTER, NOW PRESS 1 FOR AM TIME OR 2 FOR PM TIME

NOW PRESS 2 TO CONFIGURE THE DATE

ENTER THE CURRENT DAY VALUE FROM <u>1</u> TO <u>31</u> FOLLOWED BY <u>ENTER</u> ENTER THE CURRENT MONTH VALUE FROM <u>1</u> TO <u>12</u> FOLLOWED BY <u>ENTER</u> ENTER THE CURRENT 4 DIGIT YEAR VALUE FOLLOWED BY ENTER

PRESS THE <u>MENU</u> BUTTON TO MOVE BACK TO BASIC CONFIGURATION THEN PRESS <u>MENU</u> AGAIN TO MOVE BACK TO THE MAIN MENU PRESS <u>MENU</u> ONE MORE TIME TO EXIT.

Now you must change the code. To do this, follow the next set of steps.

PRESS <u>MENU</u> THEN <u>5</u> TO ENTER USER CONFIGURATION ENTER THE CODE 1234

NOW PRESS 1 TO CONFIGURE A USER PIN

PRESS 1 AGAIN FOLLOWED BY ENTER TO SELECT USER

1 ENTER A <u>NEW 4 DIGIT CODE</u> FOLLOWED BY <u>ENTER</u>

PRESS $\underline{\text{MENU}}$ TO MOVE BACK TO USER CONFIGURATION PRESS $\underline{\text{MENU}}$ AGAIN TO MOVE BACK TO MAIN MENU PRESS $\underline{\text{MENU}}$ AGAIN TO EXIT

THE 'STATUS' LIGHT SHOULD NOW BE GREEN OR YELLOW IF IT IS RED THERE IS A SYSTEM FAULT AND YOU MUST CONTACT MULTI TECH

THE SYSTEM SHOULD NOW BE READY TO USE, TO ARM THE SYSTEM PRESS THE 'AWAY' BUTTON, TO DISARM THE SYSTEM ENTER THE 4 DIGIT CODE.

IF IT IS A DOUBLE STOREY HOUSE THE GROUND FLOOR CAN BE ARMED SEPERATE TO THE FIRST FLOOR BY PRESSING THE STAY BUTTON IE NIGHT MODE FOR WHEN SLEEPING UPSTAIRS. DISARMING IS THE SAME AS ABOVE.