

HOW TO SETUP AND BEGIN USING YOUR BOSCH ALARM

IMPORTANT To begin, firstly make sure the battery has been connected inside the main control unit which is usually located in a linen cupboard or walk in robe, the battery should be connected red lead to red terminal and black lead to black terminal once you have checked this close the panel lid and check the 'plug pack' or transformer has been inserted into the power point and switched on. **DEFAULT MASTER CODE: 2580**

CHANGE THE CODE WITH A STANDARD ICON KEYPAD

2580 1 AWAY 1 AWAY NEW CODE (4 DIGITS) AWAY

SETTING THE TIME AND DATE

CODE (Eg 2580) 6 AWAY 6 DIGIT DATE (Eg 270219) 24HR 4 DIGIT TIME (Eg 1430) AWAY

ARMING/DISARMING ICON KEYPAD

FOUR DIGIT CODE THEN AWAY TO ARM OR DISARM (FOR DOUBLE STOREY HOMES THE CODE THEN STAY ARMS/DISARMS GROUND FLOOR ONLY)

CHANGE THE CODE WITH A TOUCH SCREEN KEYPAD

PRESS THE SETTINGS ICON AT THE TOP LEFT CORNER OF THE SCREEN PRESS USER CODES ENTER THE CURRENT CODE SELECT USER CODE 1 ENTER A NEW 4 DIGIT USER NUMBER PRESS THE HOME BUTTON WHEN FINISHED

SETTING TIME AND DATE WITH A TOUCH SCREEN

PRESS THE SETTINGS ICON AT THE TOP LEFT CORNER OF THE SCREEN PRESS TIME AND DATE ENTER THE CURRENT CODE ENTER THE TIME AND DATE PRESS THE HOME BUTTON WHEN FINISHED

ARMING/DISARMING TOUCH SCREEN KEYPAD

To arm: PRESS THE GREEN DISARMED ICON PRESS THE ARM AWAY ICON (ENTER YOUR CODE IF PROMPTED) *To disarm:* PRESS THE RED ARMED ICON ENTER YOUR 4 DIGIT CODE *To arm the ground floor only (double storey homes only):* PRESS THE GREEN DISARMED ICON PRESS THE ARM STAY ICON (ENTER YOUR CODE IF PROMPTED)

Multi Tech Security Solutions Pty Ltd, Master licence: 409 553 153, Cable Registration no. S27264 Ph 1300 850 871 Wk 8786 9394 fax 9826 9783 Email <u>info@multitechsecurity.com.au</u> WEB multitechsecurity.com.au * ALARMS *BACK TO BASE MONITORING *CCTV *INTERCOMS *DUCTED VACUUMS